


SEALINE-X40HC

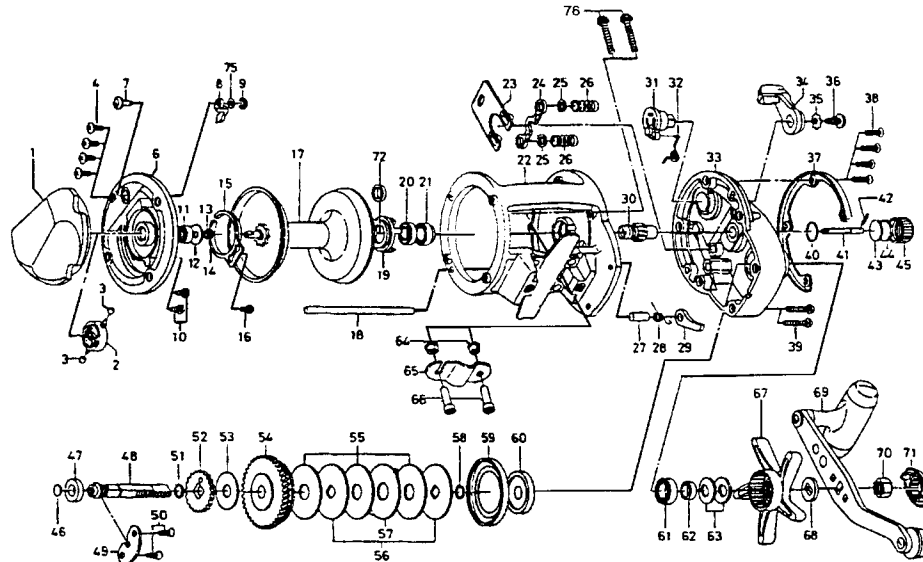

Key No.	Parts No.	Parts Name
1	F95-4703	IC INDICATOR
2	F73-5401	MAGNET HOLDER
3	F73-5801	MAGNET HOLDER COLLAR
4	F73-6202	L/S PLT SCREW A
6	F99-5601	L/S PLT
7	F73-5202	CLICK BUTTON
8	F73-5301	CLICK PAWL
9	320-5901	CLICK PAWL RET
10	351-6105	L/S PLT SCREW B
11	637-2101	BALL BEARING A
12	F73-5101	BALL BEARING COLLAR A
13	F74-2102	SPACER A
14	B41-1701	SPACER B
15	160-7923	CLICK SPRING
16	B83-4402	CLICK SPRING SCREW
17	F94-9401	SPOOL
18	F73-6803	STABILIZER BAR
19	F21-6201	BEARING RET
20	636-6402	BALL BEARING B
21	F73-3201	BUSHING A
22	F95-8901	FRAME
23	F09-7901	YOKE PLT
24	E25-2102	YOKE
25	E03-7706	YOKE WASHER
26	F93-5201	YOKE SPRING
27	F09-8201	A/R PAWL PIN
28	F77-4401	A/R PAWL SPRING
29	F73-3401	A/R PAWL
30	F73-3301	PINION GEAR
31	F09-7301	CLUTCH CAM
32	F38-5801	CLUTCH SPRING
33	F09-6916	R/S PLT
34	E42-6805	CLUTCH LEVER
35	160-8001	CLUTCH LEVER LOCK WASHER
36	E00-7602	CLUTCH LEVER SCREW
37	F09-7203	R/S OUTER RING
38	F09-3601	R/S PLT SCREW A

Key No.	Parts No.	Parts Name
39	F73-4302	R/S PLT SCREW B
40	B05-5201	O RING A
41	F73-2701	PINION SHAFT
42	F73-2801	PIN
43	375-7501	SPACER C
44	B17-5503	SPACER D
45	E31-5405	CAST CONTROL CAP
46	F73-3501	DRIVE SHAFT WASHER A
47	B73-8001	BUSHING B
48	F73-3602	DRIVE SHAFT
49	F09-8401	DRIVE SHAFT RET
50	E31-6701	DRIVE SHAFT RET SCREW
51	F65-7801	O RING B
52	F55-5102	A/R RATCHET
53	F73-3701	DRIVE SHAFT WASHER B
54	F73-3801	DRIVE GEAR
55	F87-7501	DRAG WASHER
56	E31-7001	KEY WASHER
57	E31-7101	EARED WASHER
58	F65-7801	O RING C
59	F73-3901	WATER SHIELD
60	F73-4001	BALL BEARING COLLAR B
61	B62-8601	BALL BEARING C
62	F78-8701	COLLAR A
63	E25-3501	DRAG SPRING WASHER
64	F18-7801	ROD BRACE NUT
65	041-5601	ROD BRACE
66	F18-7701	CLAMP NUT
67	F55-0415	STAR DRAG
68	E25-3901	SPACING SLEEVE
69	F78-8001	HANDLE
70	B86-2102	HANDLE NUT
71	F47-1205	HANDLE NUT PLT
72	F77-4701	COLLAR B
75	F77-4600	CLICK BUTTON WASHER
76	F18-7601	CLAMP BOLT A