
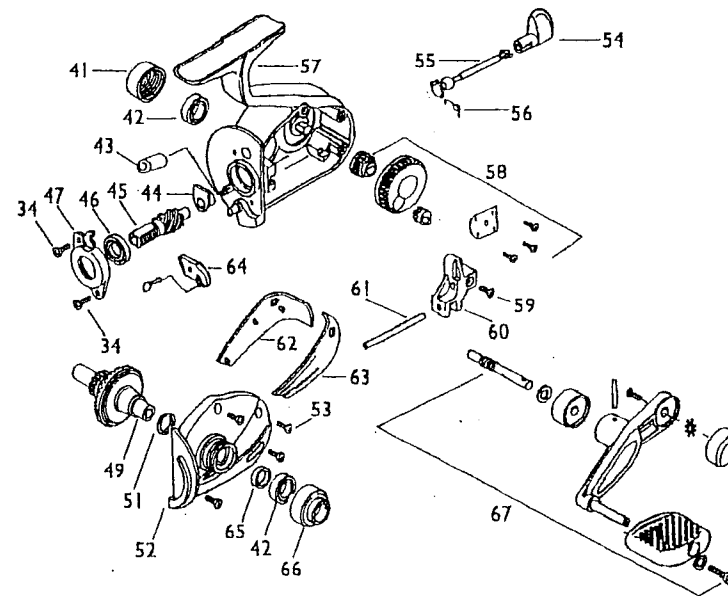


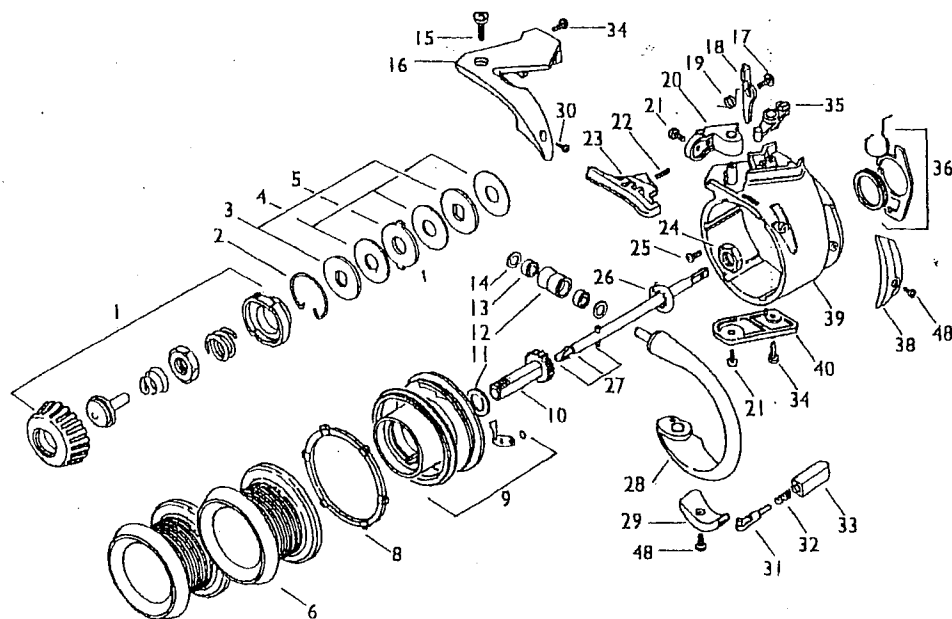

|    |          |                        |
|----|----------|------------------------|
| 1  | 889-9975 | Drag Knob Assembly     |
| 2  | 859-3300 | Retaining Ring         |
| 3  | 859-3100 | Double "D" Washer      |
| 4  | 859-3200 | Drag Washer            |
| 5  | 859-3000 | Eared Washer           |
| 6  | 888-9978 | Spool, Aluminum        |
| 7  | 888-9196 | Spool, Graphite        |
| 8  | 800-0714 | Gasket Ring            |
| 9  | 888-9197 | Spool Core Assembly    |
| 10 | 883-2800 | Spindle Spool          |
| 11 | 859-3900 | Base Drag Washer       |
| 12 | 888-9977 | Line Guide             |
| 13 | 880-7800 | Plastic Bushing        |
| 14 | 866-7700 | Line Guide Washer      |
| 15 | 880-2500 | Ball Arm Screw (Black) |
| 6  | 888-9978 | Ball Trip Cover Plate  |

26 8503900. Rotor Hex Nut Retainer

|    |          |                            |
|----|----------|----------------------------|
| 17 | 880-8000 | Ball Trip Actuation Screw  |
| 18 | 883-1600 | Ball Trip Lever            |
| 19 | 880-7600 | Ball Trip Spring           |
| 20 | 888-9979 | Ball Arm                   |
| 21 | 842-9300 | Line Guide Screw           |
| 22 | 880-2900 | Line Control Spring        |
| 23 | 888-9981 | Line Control               |
| 24 | 842-9900 | Rotor Hex Nut              |
| 25 | 850-5800 | Rotor Retainer Screw       |
| 27 | 888-9170 | Oscillation Shaft Assembly |
| 28 | 883-2800 | Ball                       |
| 29 | 880-9982 | Ball Weight                |
| 30 | 888-9192 | Balancing Weight Screw     |
| 31 | 883-2100 | Ball Spring Pin            |
| 32 | 866-4100 | Ball Spring                |
| 33 | 883-1300 | Ball Pin Sheath            |

|    |          |                         |
|----|----------|-------------------------|
| 34 | 859-6000 | Screw (Black)           |
| 35 | 883-1500 | Ball Trip Rocker        |
| 36 | 888-9209 | A/R Friction Spring     |
| 38 | 888-9983 | Rotor Weight            |
| 39 | 888-9984 | rotor                   |
| 40 | 888-9985 | Rotor Cover Plate       |
| 41 | 888-9986 | Cap                     |
| 42 | 880-5800 | Ball Bearing            |
| 43 | 885-2100 | Anti-Reverse Sleeve     |
| 44 | 883-0700 | Pinion Sleeve           |
| 45 | 883-2000 | Pinion                  |
| 46 | 850-5500 | Pinion Ball Bearing     |
| 47 | 883-1100 | Pinion Bearing Retainer |
| 48 | 859-6000 | Bearing Retainer Screw  |
| 49 | 889-9144 | Drive Gear Assembly     |
| 51 | 850-5600 | Drive Gear Washer       |

|    |          |                          |
|----|----------|--------------------------|
| 52 | 888-9987 | Side Cover Assembly      |
| 53 | 859-5700 | Side Cover Screw (Black) |
| 54 | 888-9988 | Anti-Reverse Switch      |
| 55 | 883-0200 | Anti-Reverse Shaft       |
| 56 | 850-5300 | Anti-Reverse Spring      |
| 57 | 888-9989 | Body Assembly            |
| 58 | 883-1900 | Fixed Oscillation Gear   |
| 59 | 883-2500 | Driver Oscillation Gear  |
| 60 | 883-2600 | Oscillation Gear         |
| 61 | 859-0700 | Oscillation Shaft Screw  |
| 62 | 883-0500 | Oscillation Slide        |
| 63 | 882-9100 | Oscillation Slide Bar    |
| 64 | 888-9991 | A/R Pawl Assembly        |
| 65 | 880-5200 | Brass Sieve              |
| 66 | 888-9992 | Drive Bearing Retainer   |
| 67 | 888-9992 | Crank Handle Assembly    |

SCS10