
 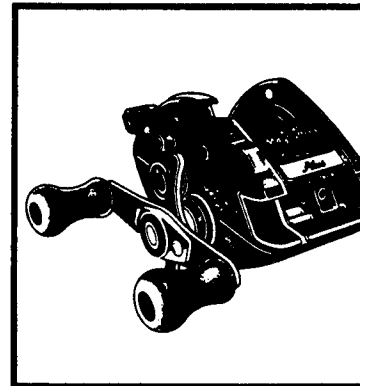


SHIMANO

1987 REPAIR MANUAL


Shimano American Corporation, One Shimano
Irvine, CA 92

• Please check the head of the "Magnetic Control Dial"
here to see whether you have an old or new-type reel.



EXPLODED PARTS VIEW

Bantam
Magnumlite 2000GT

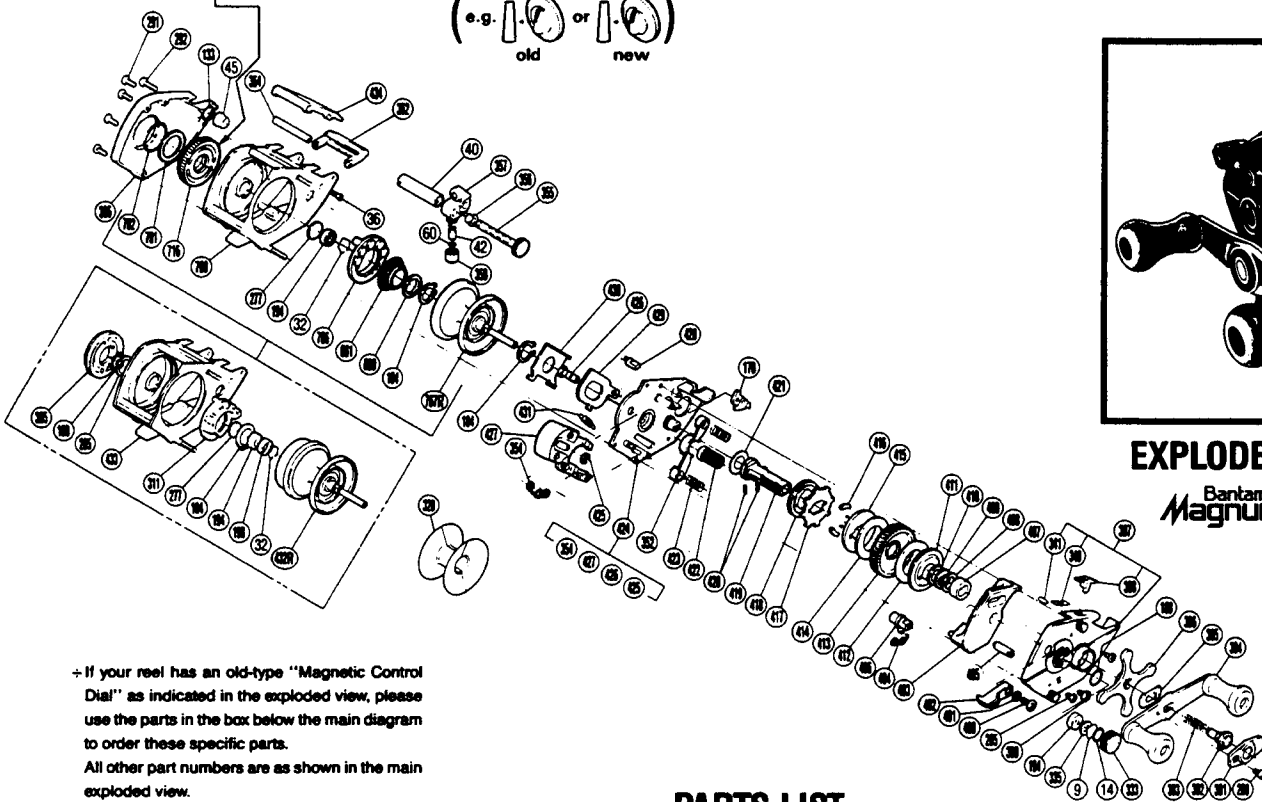

• If your reel has an old-type "Magnetic Control Dial" as indicated in the exploded view, please use the parts in the box below the main diagram to order these specific parts.
All other part numbers are as shown in the main exploded view.

PARTS LIST

PART # DESCRIPTION

BNT 0009 Spacer (A)
BNT 0014 Friction Washer (B)
BNT 0032 Bearing Retainer
BNT 0036 Stabilizer Bar Screw (A) (S)
BNT 0040 Level Wind Guard
BNT 0042 Line Guide Pawl
BNT 0045 Worm Bearing (B)
BNT 0060 Spacer (Optional)
BNT 0133 Worm Shaft Retainer
BNT 0170 Anti-Reverse Pawl (Assembly)
BNT 0184 Magnet Retainer Lock
BNT 0188 O Ring
BNT 0194 Ball Bearing
BNT 0198 Bearing Spacer
BNT 0265 Spacer (Optional)
BNT 0277 Spacer (B)
BNT 0280 Handle Screw "B"
BNT 0285 Set Plate Screw
BNT 0291 Side Plate Screw
BNT 0292 Stabilizer Bar Screw (B)
BNT 0311 Magnet Retainer (Assembly)
BNT 0328 V Spool Converter
BNT 0333 Cast Control Cap
BNT 0335 Bearing Washer (A)
BNT 0340 Switch Spring
BNT 0341 Switch Spring Lock
BNT 0352 (Pinion) Yoke
BNT 0354 Retractor Spring
BNT 0355 Worm Shaft Assembly
BNT 0356 Worm Bearing "A"

PART # DESCRIPTION

BNT 0357 Line Guide (Assembly)
BNT 0358 Pawl Cap
BNT 0362 Level Wind Protector
BNT 0364 Stabilizer Bar
BNT 0365 Magnetic Control Dial
BNT 0366 Left Side Plate
BNT 0391 Handle Screw Lock Plate
BNT 0392 Handle Screw "A"
BNT 0393 Drive Shaft Spring
BNT 0394 Handle Assembly
BNT 0395 Friction Washer "A"
BNT 0396 Star Drag Assembly
BNT 0397 Right Side Plate Assembly
BNT 0398 Anti-Reverse Switch
BNT 0399 Retractor Guide Screw (Large Head)
BNT 0400 Fightin' Lever Screw
BNT 0401 Fightin' Lever Screw Washer
BNT 0402 Fightin' Lever
BNT 0403 Clutch Button Attachment
BNT 0404 Joint Cam Yoke Spring
BNT 0405 Retractor Guide
BNT 0406 Joint Cam Yoke
BNT 0407 Bushing "B"
BNT 0408 Friction Washer "B"
BNT 0409 Drag Spring Washer
BNT 0410 Friction Washer "C"
BNT 0411 Key Washer "A"
BNT 0412 Drag Washer
BNT 0413 Drive Gear

PART # DESCRIPTION

BNT 0414 Drive Shaft Washer "B"
BNT 0415 Key Washer "B"
BNT 0416 Gear Protector Rubber
BNT 0417 Anti-Reverse Ratchet
BNT 0418 Level Wind Drive Gear
BNT 0419 Drive Shaft
BNT 0420 Drive Shaft Lock
BNT 0421 Drive Shaft Washer "A"
BNT 0422 Pinion Gear Assembly
BNT 0423 Yoke Spring
BNT 0424 Set Plate Assembly
BNT 0425 Clutchbutton Lock
BNT 0426 Fightin' Lever Cam
BNT 0427 Clutch Button
BNT 0428 Slide Cam
BNT 0429 Slide Plate
BNT 0430 Slide Plate Cover
BNT 0431 Slide Plate Spring
BNT 0432R Spool Assembly
BNT 0433 Frame Assembly
BNT 0434 Thumb Rest
BNT 0660 Spring Spacer
BNT 0661 Magnet Retainer Spring
BNT 0701 Thrust Washer Spacer (Optional)
BNT 0702 Dial O Ring
BNT 0706 Magnet Retainer
BNT 0716 Magnet Control Dial
BNT 0767R Spool Assembly
BNT 0768 Frame Assembly