
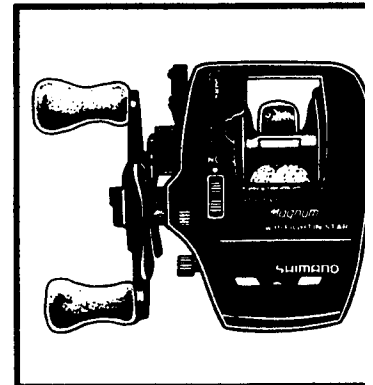
 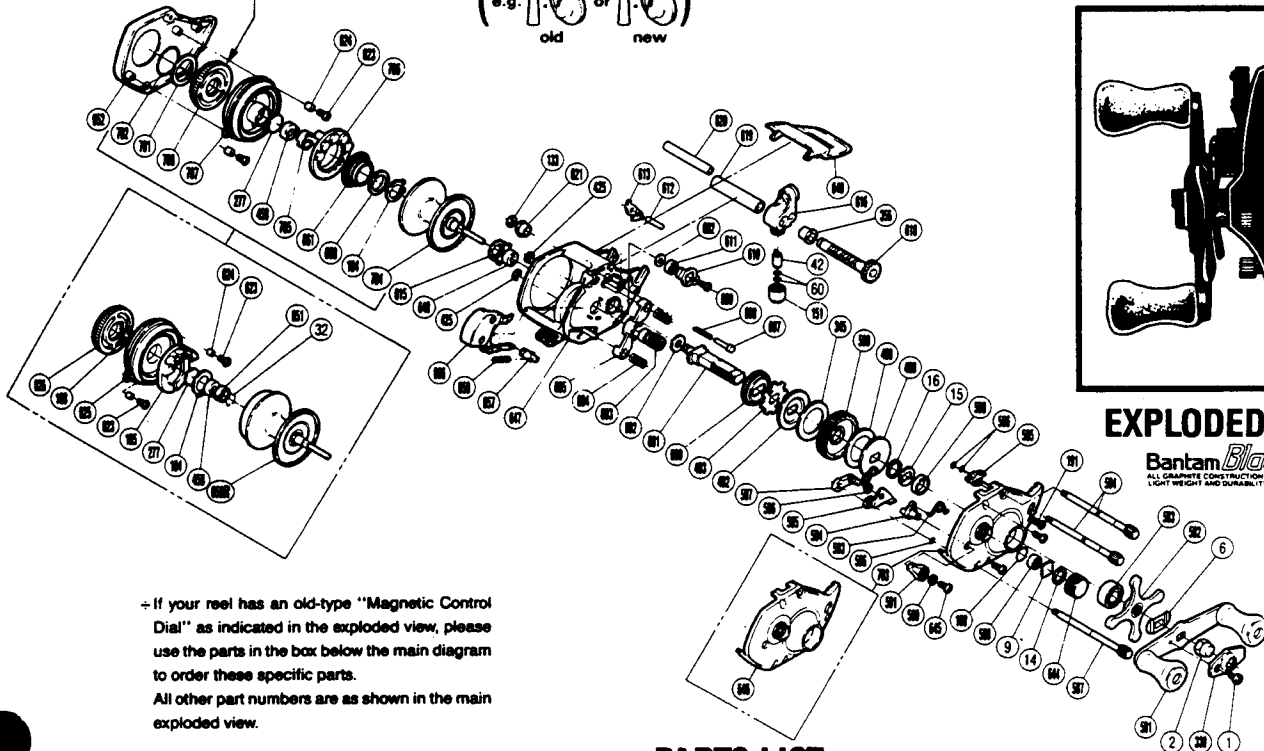


SHIMANO

1987 REPAIR MANUAL

Shimano American Corporation, One Shimano
Irvine, CA 92

✦ Please check the head of the "Magnetic Control Dial"
here to see whether you have an old or new-type reel.



EXPLODED PARTS VIEW

Bantam Black Magnum 1C
ALL GRAPHITE CONSTRUCTION FOR STRENGTH — BALL BEARING SYSTEM
LIGHT WEIGHT AND DURABILITY

✦ If your reel has an old-type "Magnetic Control Dial" as indicated in the exploded view, please use the parts in the box below the main diagram to order these specific parts.

All other part numbers are as shown in the main exploded view.

PARTS LIST

PART # DESCRIPTION

BNT 0001 Handle Screw "B"
BNT 0002 Handle Nut
BNT 0006 Friction Washer (A)
BNT 0009 Spacer (A)
BNT 0014 Friction Washer (B)
BNT 0015 Drag Spring Washer
BNT 0016 Friction Washer (C)
BNT 0032 Bearing Retainer
BNT 0042 Line Guide Pawl
BNT 0060 Spacer (Optional)
BNT 0133 Worm Shaft Retainer
BNT 0151 Pawl Cap
BNT 0184 Magnet Retainer Lock
BNT 0185 Magnet Retainer (Assembly)
BNT 0188 O Ring
BNT 0191 Side Plate Screw
BNT 0277 Spacer (B)
BNT 0330 Handle Nut (Lock) Plate
BNT 0345 Drive Shaft Washer "B"
BNT 0356 Worm Bearing "A"
BNT 0425 Clutchbutton Lock
BNT 0458 Bushing "A"
BNT 0489 Key Washer "A"
BNT 0490 Drag Washer
BNT 0492 Key Washer "B"
BNT 0493 Anti-Reverse Ratchet
BNT 0581 Handle Assembly
BNT 0582 Star Drag
BNT 0583 Drive Shaft Bearing
BNT 0584 Left Side Plate Bolt "C"

PART # DESCRIPTION

BNT 0585 Anti-Reverse Switch
BNT 0586 Bolt Retainer
BNT 0587 Left Side Plate Bolt "A"
BNT 0588 Spool Shaft Bushing
BNT 0590 Lock Washer
BNT 0591 Flipping Lever
BNT 0593 Cam Spring
BNT 0594 Flipping Cam
BNT 0595 Joint Plate
BNT 0596 Retractor Spring
BNT 0597 Retractor Spring Guide
BNT 0598 Bushing
BNT 0599 Drive Gear
BNT 0600 Idle Gear
BNT 0601 Drive Shaft
BNT 0602 Drive Shaft Washer "C"
BNT 0603 Pinion Gear
BNT 0604 Yoke Spring
BNT 0605 Yoke
BNT 0606 Clutch Button
BNT 0607 Switch Spring Pin
BNT 0608 Switch Spring
BNT 0609 Drive Shaft Retainer Screw
BNT 0610 Drive Shaft Retainer
BNT 0611 Drive Shaft Bushing
BNT 0612 Anti-Reverse Pawl Pin
BNT 0613 Anti-Reverse Pawl
BNT 0615 Bearing Retainer
BNT 0616 Line Guide
BNT 0618 Worm Shaft

PART # DESCRIPTION

BNT 0619 Level Wind Guard
BNT 0620 Stabilizer Bar
BNT 0621 Worm Bearing "B"
BNT 0623 Dial Case Screw
BNT 0624 Screw Support
BNT 0625 Dial Case
BNT 0626 Magnetic Control Dial
BNT 0644 Cast Control Cap
BNT 0645 Flipping Lever Screw
BNT 0646 Right Side Plate
BNT 0647 One-Piece Frame
BNT 0648 Spool Shaft Bushing
BNT 0649 Thumb Rest
BNT 0650R Spool (Right Handle)
BNT 0651 Bushing Spacer
BNT 0652 Left Side Plate
BNT 0657 Clutch Button Guide Pin
BNT 0658 Flipping Retractor Spring
BNT 0660 Spring Spacer
BNT 0661 Magnet Retainer Spring
BNT 0701 Thrust Washer Spacer (Optional)
BNT 0702 Dial O Ring
BNT 0703 Right Side Plate
BNT 0704 Spool
BNT 0705 Bushing Retainer
BNT 0706 Magnet Retainer
BNT 0707 Dial Case
BNT 0708 Magnet Control Dial