


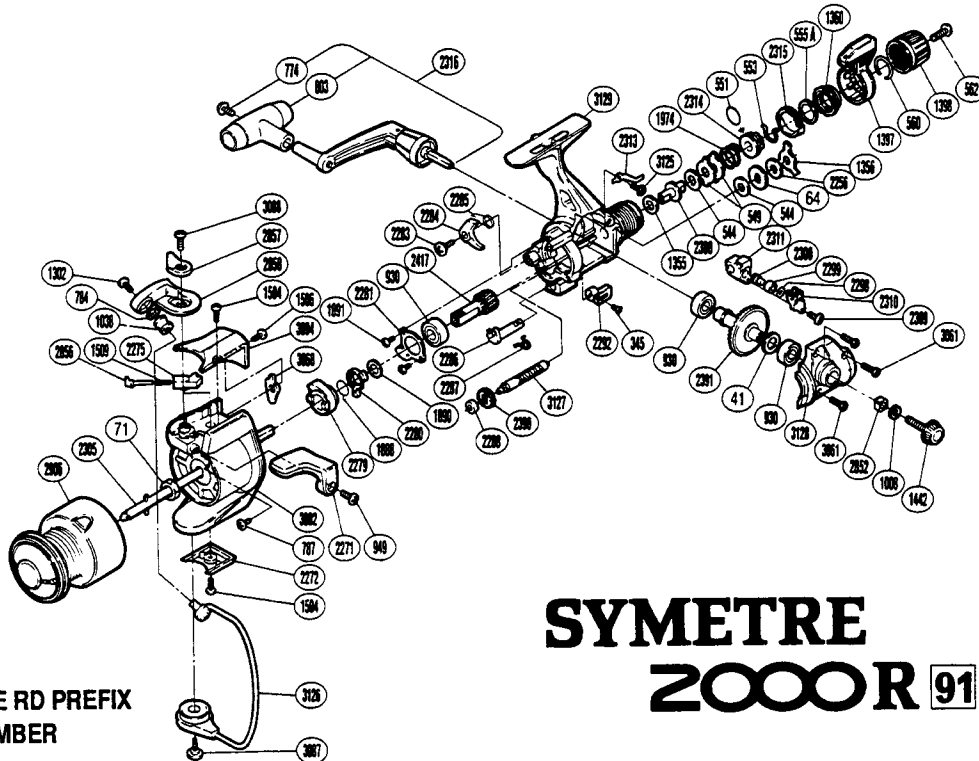

TO ORDER: USE RD PREFIX
WITH PART NUMBER

SYMETRE 2000R 91

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0041	Drive Gear Washer	1504	Bail Spring Cover Screw	2310	Oscillating Slider Retainer
0064	Click Gear	1506	Bail Trip Lever Screw	2311	Oscillating Slider
0071	Rotor Nut	1509	Bail Spring	2313	Drag Click
0345	Anti-Reverse Lever Screw	1888	Anti-Reverse Lock Out Spring	2314	Pressure Screw
0544	Drag Washer "C" (white)	1890	Bushing Washer	2315	Lever Click Gear
0549	Eared Washer "B"	1891	Bearing Retainer Screw	2316	Handle Assembly
0551	"O" Ring	1974	Drag Coil Spring	2380	Drag Shaft
0553	Hold Click Spring	2256	Drag Washer "C1"	2390	Idle Gear
0555A	Fightin' Pressure Screw Washer	2271	Quick Fire II Trigger	2391	Drive Gear
0560	Lever Hold Spring	2272	Rotor Side Cover	2417	Pinion Gear
0562	Drag Programmer Screw	2275	Bail Spring Guide (B)	2852	Handle Screw Lock
0774	Handle Knob Screw	2279	Anti-Reverse Ratchet	2856	Bail Spring Guide (A)
0784	Line Roller Washer	2280	Anti-Reverse Lock Out	2857	Trigger Cam
0787	Nut Lock Screw	2281	Bearing Retainer	2858	Bail Arm
0803	Handle Knob	2283	Anti-Reverse Pawl	2906	Spool Assembly
0930	Ball Bearing	2284	Anti-Reverse Pawl	3061	Side Cover Screw
0949	Trigger Screw	2285	Anti-Reverse Pawl Spring	3068	Bail Trip Lever
1008	Handle Lock Washer	2286	Anti-Reverse Cam	3087	Bail Trip Cam Screw
1038	SiC Ceramic Roller	2287	Anti-Reverse Cam Spring	3088	Bail Arm Screw
1302	Line Roller Screw	2288	Worm Bearing	3092	Rotor
1355	Drag Washer "C1" (white)	2292	Anti-Reverse Lever	3094	Bail Spring Cover
1356	Eared Washer "B"	2298	Spacer	3125	Drag Click Screw
1360	Fightin' Pressure Screw	2299	Oscillating Slider Bushing	3126	Bail Assembly
1397	Fightin' Drag II Lever	2300	Oscillating Pawl	3127	Worm Shaft
1398	Drag Programmer	2305	Main Shaft	3128	Side Cover
1442	Handle Screw Cap	2309	Slider Retainer Screw	3129	Body