



SOLSTACE

4000

94

'94 SQ 4000FA

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3655	Cover Screw	3688	Anti-Reverse Lock Out
0041	Drive Gear Washer	3661	Anti-Reverse Lever Assembly	3689	Bushing Washer
0071	Rotor Nut	3665	Slider Retainer Screw	3690	Pinion Gear
0787	Nut Lock Screw	3668	Handle Screw Cap Assembly	3691	Anti-Reverse Pawl
0792	Bearing Retainer Screw	3676	Drag Knob	3692	Anti-Reverse Pawl Spring
0930	Ball Bearing	3677	Main Shaft	3693	Anti-Reverse Cam
1506	Multi Purpose Screw	3678	Rotor	3694	Drive Gear
1511	Lever Spring	3679	Quick-Fire II Trigger Assembly	3695	Oscillating Gear
1520	Anti-Reverse Cam Spring	3680	Ball Assembly	3696	Oscillating Slider
2516	Spool Support	3681	Ball Spring Guide(A)	3697	Side Cover Screws
2541	Anti-Reverse Pawl Screw	3682	Ball Spring	3699	Handle Assembly
2861	Trigger Cam	3683	Ball Spring Guide(B)	3869	Anti-Reverse Lock Out Spring
3449	Spool Assembly(aluminum)	3684	Ball Spring Cover	4163	Line Roller Bushing
3452	Spool Assembly(graphite)	3685	Ball Trip Lever	4193	Body Assembly
3503	Spool Washer	3686	Counterbalance Cover		
3649	Line Roller	3687	Anti-Reverse Ratchet		

(051208)