



TX
4000 94

'94 TX 4000F

RD.No.	PARTS NAMES	RD.No.	PARTS NAMES	RD.No.	PARTS NAMES
0026	Ball Bearing	3655	Cover Screw	3687	Anti-Reverse Ratchet
0041	Drive Gear Washer	3661	Anti-Reverse Lever Assembly	3688	Anti-Reverse Lock Out
0071	Rotor Nut	3665	Slider Retainer Screw	3689	Bushing Washer
0787	Nut Lock Screw	3668	Handle Screw Cap Assembly	3690	Pinion Gear
0792	Bearing Retainer Screw	3676	Drag Knob	3691	Anti-Reverse Pawl
1506	Multi Purpose Screw	3677	Main Shaft	3692	Anti-Reverse Pawl Spring
1511	Lever Spring	3678	Rotor	3693	Anti-Reverse Cam
1520	Anti-Reverse Cam Spring	3679	Quick-Fire II Trigger Assembly	3964	Drive Gear
2293	Drive Gear Bushing	3680	Bail Assembly	3695	Oscillating Gear
2516	Spool Support	3681	Bail Spring Guide (A)	3696	Oscillating Slider
2541	Anti-Reverse Pawl Screw	3682	Bail Spring	3697	Side Cover Screws
2861	Trigger Cam	3683	Bail Spring Guide (B)	3699	Handle Assembly
3449	Spool Assembly	3684	Bail Spring Cover	3869	Anti-Reverse Lock Out Spring
3503	Spool Washer	3685	Bail Trip Lever	4163	Line Roller Bushing
3649	Line Roller	3686	Counterbalance Cover	4187	Body Assembly

(051208)