


## CORIOLIS CO-2000 98

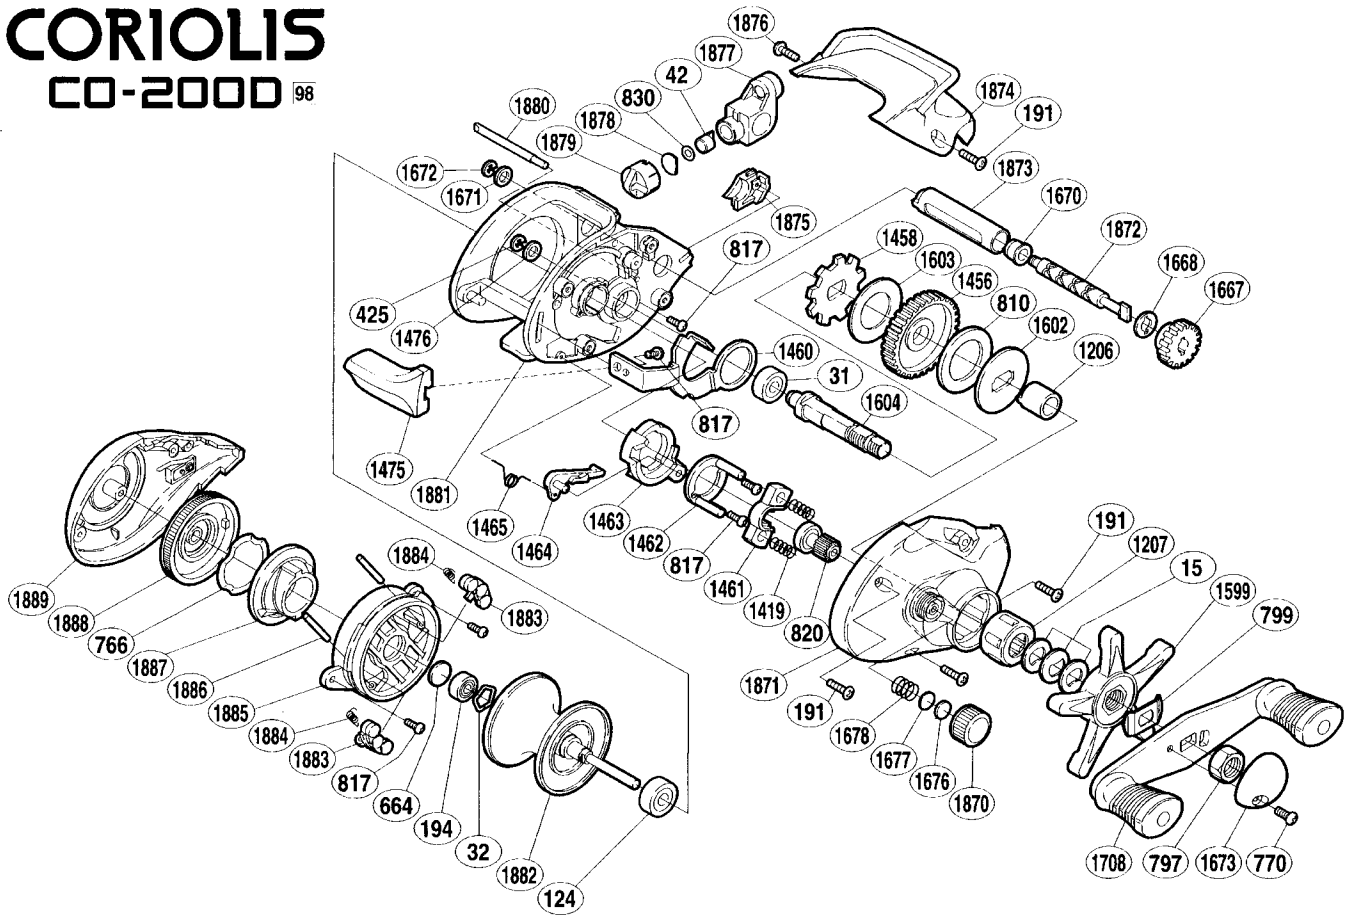

### '98 CO200D

Part #	Description
BNT0015	Drag Spring Washer
BNT0031	Ball Bearing
BNT0032	Bearing Retainer
BNT0042	Line Guide Pawl
BNT0124	Ball Bearing
BNT0191	Multi-Purpose Screw
BNT0194	Ball Bearing
BNT0425	Drive Gear Retainer
BNT0664	Spacer (B)
BNT0766	Dial Friction Washer
BNT0770	Handle Nut Plate Screw
BNT0797	Handle Nut
BNT0799	Friction Washer
BNT0810	Drag Washer
BNT0817	Multi-Purpose Screw
BNT0820	Pinion Gear
BNT0830	Spacer (optional)
BNT1206	Roller Clutch Inner Tube
BNT1207	Roller Clutch Bearing
BNT1419	Yoke Spring
BNT1456	Drive Gear
BNT1458	Anti-Reverse Ratchet

Part #	Description
BNT1460	Clutch Plate
BNT1461	Yoke
BNT1462	Clutch Cam Retainer
BNT1463	Clutch Cam
BNT1464	Clutch Pawl
BNT1465	Clutch Pawl Spring
BNT1475	Quick-Fire II Clutch Bar
BNT1476	Drive Shaft Washer (D)
BNT1599	Star Drag
BNT1602	Key Washer
BNT1603	Drive Shaft Washer
BNT1604	Drive Shaft
BNT1667	Worm Gear
BNT1668	Worm Shaft Washer (A)
BNT1670	Worm Bushing
BNT1671	Worm Shaft Washer (B)
BNT1672	"E" Lock
BNT1673	Handle Nut Plate
BNT1676	Spool Tension Spacer (B)
BNT1677	Spool Tension Spacer (A)
BNT1678	Spool Tension Spring
BNT1708	Handle Assembly

Part #	Description
BNT1870	Cast Control Cap
BNT1871	Right Side Plate
BNT1872	Worm Shaft
BNT1873	Level Wind Guard
BNT1874	Thumb Rest
BNT1875	Drive Shaft Washer
BNT1876	Thumb Rest Screw
BNT1877	Line Guide
BNT1878	Pawl Cap Spacer
BNT1879	Pawl Cap
BNT1880	Stabilizer Bar
BNT1881	One-Piece Frame
BNT1882	Spool
BNT1883	Magnet Retainer
BNT1884	Magnet Retainer Spring
BNT1885	Dial Case
BNT1886	Magnet Retainer Shaft
BNT1887	Brake Cam
BNT1888	Magnet Control Dial
BNT1889	Left Side Plate