



# CALCUTTA 150 98

## '98 CT150

Part #	Description
BNT0009	Cast Control Spacer
BNT0011	Right Side Plate Screw
BNT0015	Drag Spring Washer
BNT0032	Bearing Retainer
BNT0036	Left Side Plate Screw
BNT0042	Line Guide Pawl
BNT0133	Worm Shaft Retainer
BNT0188	"O" Ring
BNT0192	Left Side Plate Screw
BNT0194	Ball Bearing
BNT0425	"E" Lock
BNT0586	Bolt Retainer
BNT0609	Clutch Cam Screw
BNT0664	Spacer (B)
BNT0686	Idle Gear (B) Retainer
BNT0795	Handle Nut Plate Screw
BNT0797	Handle Nut
BNT0799	Friction Washer
BNT0830	Spacer (Optional)
BNT1133	Yoke Spring
BNT1201	Retractor Spring Collar
BNT1206	Roller Clutch Inner Tube
BNT1207	Roller Bearing
BNT1208	Right Side Plate Bolt
BNT1214	Drag Washer (A)

Part #	Description
BNT1218	Idle Gear (A) Spacer
BNT1227	Clutch Pawl Spring Retainer
BNT1230	Drive Shaft Spacer
BNT1237	Worm Bushing (A) Retainer Screw
BNT1239	Pawl Cap
BNT1240	Line Guide
BNT1241	Level Wind Guard
BNT1243	Worm Bushing (B)
BNT1252	Right Side Plate Bolt Washer
BNT1289	Star Drag Spacer
BNT1327	Idle Gear
BNT1337	Clutch Bar Support Spacer
BNT1338	Clutch Bar Guide (A)
BNT1423	Key Washer
BNT1424	Drag Washer (C)
BNT1425	Drive Gear
BNT1428	Yoke
BNT1429	Clutch Cam Retainer
BNT1430	Clutch Cam
BNT1431	Retractor Spring
BNT1432	Clutch Plate
BNT1433	Idle Gear (B)
BNT1434	Set Plate
BNT1435	Clutch Pawl Spacer
BNT1436	Clutch Pawl

Part #	Description
BNT1437	Clutch Pawl Spring
BNT1438	Drive Shaft Bushing
BNT1440	Worm Bushing (A) Retain
BNT1442	Clutch Bar Guide (B)
BNT1443	Quick-Fire II Clutch Bar
BNT1447	Drive Shaft
BNT1448	Anti-Reverse Ratchet
BNT1476	Worm Shaft Spacer
BNT1587	Pinion Gear
BNT1611	Handle Nut Plate
BNT1699	Worm Bushing (A)
BNT1714	Worm Shaft
BNT1715	Brake Collar (Red)
BNT1716	Handle Assembly
BNT1910	Cast Control Cap
BNT1911	Star Drag
BNT1912	Right Side Plate
BNT1913	Spool Assembly
BNT1914	Forged One-Piece Frame
BNT1915	Left Side Plate
BNT1916	Clutch Bar Support
BNT1713	Brake Collar (Green)