



# CALCUTTA 151 98

**98' CT151**

Part #	Description
BNT0009	Cast Control Spacer
BNT0011	Left Side Plate Screw
BNT0015	Drag Spring Washer
BNT0032	Bearing Retainer
BNT0036	Right Side Plate Screw
BNT0042	Line Guide Pawl
BNT0133	Worm Shaft Retainer
BNT0188	"O" Ring
BNT0192	Right Side Plate Screw
BNT0194	Ball Bearing
BNT0425	"E" Lock
BNT0586	Bolt Retainer
BNT0609	Clutch Cam Screw
BNT0664	Spacer (B)
BNT0686	Idle Gear (B) Retainer
BNT0795	Handle Nut Plate Screw
BNT0799	Friction Washer
BNT0830	Spacer (Optional)
BNT1133	Yoke Spring
BNT1201	Retractor Spring Collar
BNT1206	Roller Clutch Inner Tube
BNT1207	Roller Clutch Bearing
BNT1208	Left Side Plate Bolt
BNT1214	Drag Washer (A)
BNT1218	Idle Gear (A) Spacer

Part #	Description
BNT1227	Clutch Pawl Spring Retainer
BNT1230	Drive Shaft Spacer
BNT1237	Worm Bushing (A) Retainer Screw
BNT1239	Pawl Cap
BNT1240	Line Guide
BNT1241	Level Wind Guard
BNT1243	Worm Bushing (B)
BNT1252	Left Side Plate Bolt Washer
BNT1289	Star Drag Spacer
BNT1327	Idle Gear
BNT1337	Clutch Bar Support Spacer
BNT1338	Clutch Bar Guide (A)
BNT1423	Key Washer
BNT1424	Drag Washer (C)
BNT1433	Idle Gear (B)
BNT1435	Clutch Pawl Spacer
BNT1438	Drive Shaft Bushing
BNT1448	Anti-Reverse Ratchet
BNT1476	Worm Shaft Spacer
BNT1611	Level Wind Guide
BNT1692	Handle Nut Plate
BNT1714	Worm Shaft
BNT1715	Brake Collar (Red)
BNT1716	Handle Assembly
BNT1788	Handle Nut

Part #	Description
BNT1805	Worm Bushing (A)
BNT1910	Cast Control Cap
BNT1913	Spool Assembly
BNT1915	Right Side Plate
BNT1916	Clutch Bar Support
BNT2003	Star Drag
BNT2004	Left Side Plate
BNT2005	Drive Gear
BNT2006	Drive Shaft
BNT2007	Pinion Gear
BNT2008	Yoke
BNT2009	Clutch Cam
BNT2010	Retractor Spring
BNT2011	Clutch Plate
BNT2012	Set Plate
BNT2013	Clutch Pawl
BNT2014	Clutch Pawl Spring
BNT2015	Worm Bushing (A) Retainer
BNT2016	Forged One-Piece Frame
BNT2017	Clutch Bar Guide (B)
BNT2018	Quick-Fire II Clutch Bar
BNT2046	Clutch Cam Retainer
BNT1713	Brake Collar (Green)