


CALAIS™ CL200-5 99

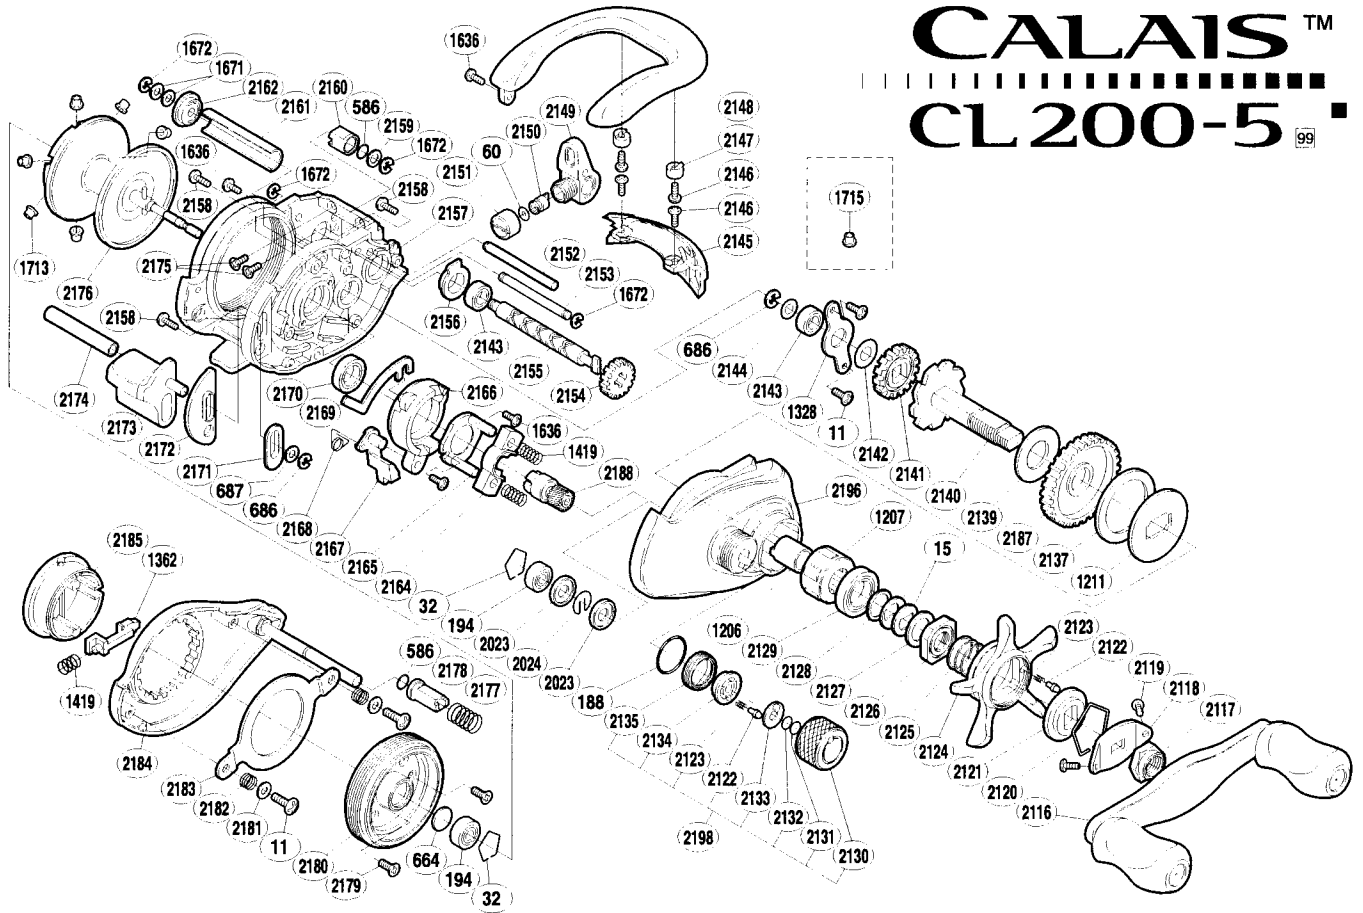

BNT No.	PARTS NAMES
BNT0011	Multi-Purpose Screw (A)
BNT0015	Drag Spring Washer
BNT0032	Bearing Retainer
BNT0060	Spacer (optional)
BNT0188	iOi Ring
BNT0194	Ball Bearing
BNT0586	Friction Ring
BNT0664	Spacer (B)
BNT0686	iEi Lock
BNT0687	Spacer
BNT1206	Roller Clutch Inner Tube
BNT1207	Roller Clutch Bearing
BNT1211	Key Washer
BNT1328	Drive Shaft Retainer
BNT1362	Turnkey Pawl
BNT1419	Yoke Spring
BNT1636	Multi-Purpose Screw (B)
BNT1671	Worm Shaft Washer
BNT1672	iEi Lock
BNT1713	Brake Collar-green (single)
BNT2023	Spool Shaft Clip Holder
BNT2024	Spool Shaft Clip
BNT2116	Handle Assembly
BNT2117	Handle Nut
BNT2118	Handle Nut Plate
BNT2119	Nut Plate Screw
BNT2120	Click Plate Retainer
BNT2121	Star Drag Click Plate
BNT2122	Click Pin
BNT2123	Click Spring
BNT2124	Star Drag
BNT2125	Star Drag Spring

BNT No.	PARTS NAMES
BNT2126	Star Drag Nut
BNT2127	Star Drag Spacer
BNT2128	Bearing Washer
BNT2129	Star Drag Bearing
BNT2130	Cast Control Cap
BNT2131	Spool Tension Spacer (B)
BNT2132	Spool Tension Spacer (A)
BNT2133	Cast Control Click Plate
BNT2134	Click Pin Holder
BNT2135	Cast Control Click Holder
BNT2137	Drag Washer (C)
BNT2139	Drag Washer (A)
BNT2140	Drive Shaft
BNT2141	Idle Gear (A)
BNT2142	Idle Gear (A) Spacer
BNT2143	Ball Bearing
BNT2144	Drive Shaft Washer
BNT2145	Level Wind Protector
BNT2146	Line Guard Screw
BNT2147	Line Guard Screw Cover
BNT2148	Thumb Rest
BNT2149	Line Guide
BNT2150	Line Guide Pawl
BNT2151	Pawl Cap
BNT2152	Level Wind Guide
BNT2153	Line Guard (C)
BNT2154	Idle Gear (C)
BNT2155	Worm Shaft
BNT2156	Worm Bushing (A)
BNT2157	One-Piece Frame
BNT2158	Right Side Plate Screw
BNT2159	Damper Washer

BNT No.	PARTS NAMES
BNT2160	Damper (B)
BNT2161	Level Wind Guard
BNT2162	Worm Bushing (B)
BNT2164	Yoke
BNT2165	Clutch Cam Retainer
BNT2166	Clutch Cam
BNT2167	Clutch Pawl
BNT2168	Clutch Pawl Spring
BNT2169	Clutch Plate
BNT2170	Ball Bearing
BNT2171	Clutch Bar Guide (A)
BNT2172	Clutch Bar Guide (B)
BNT2173	Quick-Fire II Clutch Bar
BNT2174	Clutch Bar Support
BNT2175	Thumb Rest Screw
BNT2176	Spool Assembly
BNT2177	Left Side Plate Spring
BNT2178	Damper (A)
BNT2179	Brake Case Screw
BNT2180	Brake Case
BNT2181	Brake Case Ring Washer
BNT2182	Brake Case Ring Spring
BNT2183	Brake Case Ring
BNT2184	Left Side Plate
BNT2185	Turnkey Dial
BNT2187	Drive Gear
BNT2188	Pinion Gear
BNT2196	Right Side Plate
BNT2198	Cast Control Cap Assembly
BNT1715	Brake Collar-red (single)
BNT1317	Brake Collar-red (6 pieces)
BNT1309	Brake Collar-green (6 pieces)

(110628)