


## SUSTAIN® 6000FB<sub>00</sub>

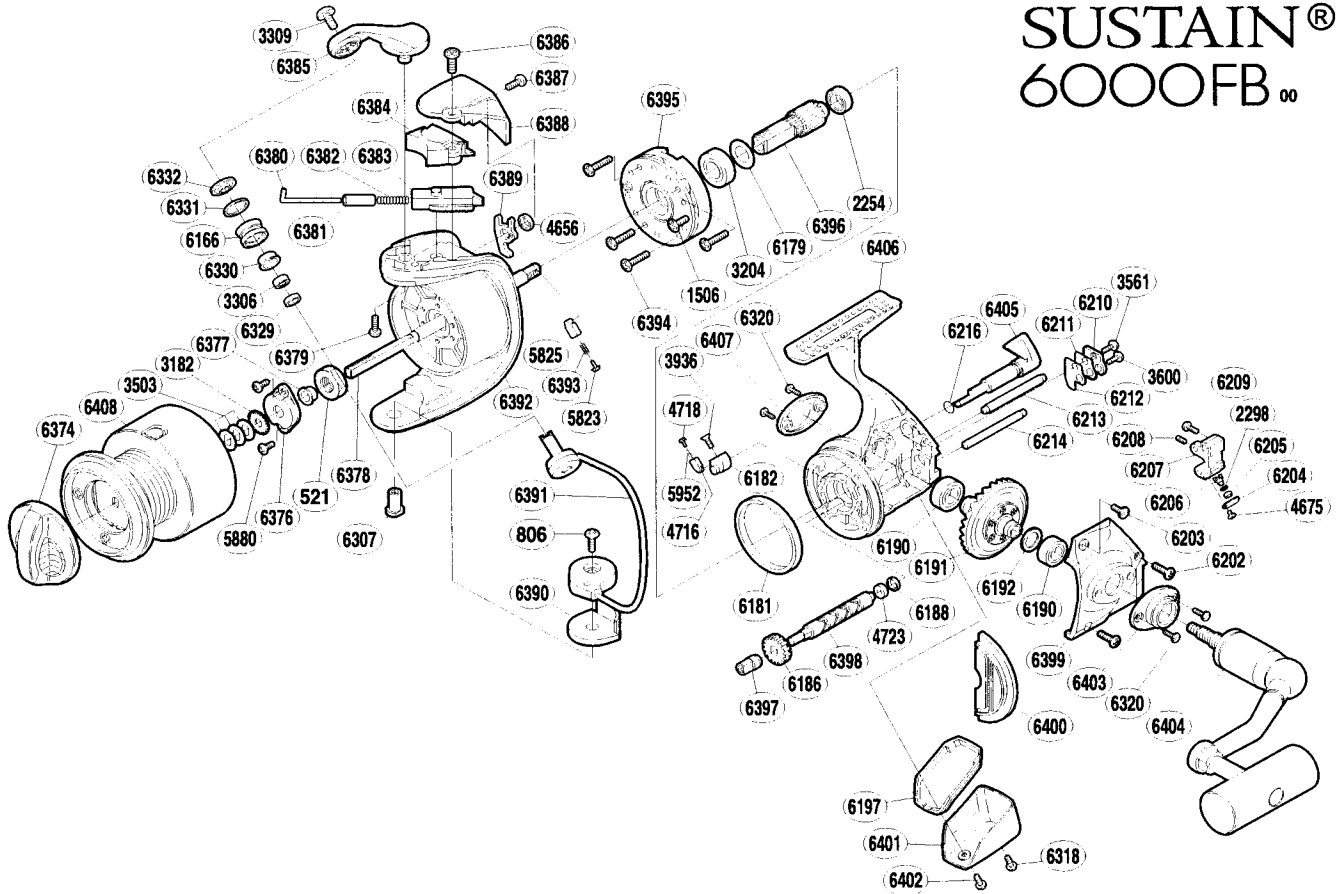

Part No.	Description	Part No.	Description	Part No.	Description
RD 0521	Rotor Nut	RD 6191	Drive Gear	RD 6380	Bail Spring Guide (A)
RD 0806	Bail Hold Support Screw	RD 6192	Drive Gear Washer	RD 6381	Spring Guide (A) Support
RD 1506	Clutch Cover Screw	RD 6197	Rear Shield	RD 6382	Bail Spring
RD 2254	Ball Bearing	RD 6202	Side Cover Screw (long)	RD 6383	Bail Spring Guide (B)
RD 2298	Spacer	RD 6203	Side Cover Screw (short)	RD 6384	Bail Spring Cover
RD 3182	Spool Support	RD 6204	Oscillating Pawl Cover	RD 6385	Bail Arm
RD 3204	Ball Bearing	RD 6205	Oscillating Slider Bushing	RD 6386	Protector Screw (A)
RD 3306	Ball Bearing	RD 6206	Oscillating Pawl	RD 6387	Protector Screw (B)
RD 3309	Line Roller Screw	RD 6207	Oscillating Slider	RD 6388	Rotor Protector
RD 3503	Spool Washer	RD 6208	Set Screw	RD 6389	Bail Trip Lever
RD 3561	Worm Shaft Retainer Screw (small)	RD 6209	Slider Retainer Screw	RD 6390	Bail Hold Support Spacer
RD 3600	Worm Shaft Retainer Screw (large)	RD 6210	Worm Shaft Retainer Spacer	RD 6391	Bail Assembly
RD 3936	Anti-Reverse Cam Screw	RD 6211	Worm Shaft Retainer	RD 6392	Rotor
RD 4656	Trip Lever Spacer	RD 6212	Worm Shaft Retainer Washer	RD 6393	Lever Spring
RD 4675	Oscillating Pawl Cover Screw	RD 6213	Oscillating Guide (A)	RD 6394	Roller Clutch Screw
RD 4716	Lever Spring Guide (B)	RD 6214	Oscillating Guide (B)	RD 6395	Roller Clutch Assembly
RD 4718	Lever Spring Guide (A)	RD 6216	iO <i>i</i> Ring	RD 6396	Pinion Gear
RD 4723	Worm Bushing Rear	RD 6307	Bail Hold Support Shaft	RD 6397	Worm Bushing (front)
RD 5823	Lever Spring Guide (A)	RD 6318	Rear Protector Screw (A)	RD 6398	Worm Shaft
RD 5825	Lever Spring Guide (B)	RD 6320	Cap Screw	RD 6399	Side Cover
RD 5880	Nut Lock Screw	RD 6329	Bearing Spacer	RD 6400	Side Cover Flange
RD 5925	Bail Trip Lever Spring	RD 6330	Line Roller Bushing	RD 6401	Rear Protector
RD 6166	Line Roller	RD 6331	Line Roller Spacer	RD 6402	Rear Protector Screw (B)
RD 6179	Bearing Washer	RD 6332	Line Roller Washer	RD 6403	Handle Screw Cap (A)
RD 6181	Friction Ring	RD 6374	Drag Knob	RD 6404	Handle Assembly
RD 6182	Anti-Reverse Cam	RD 6376	Rotor Nut Lock Plate	RD 6405	Anti-Reverse Lever
RD 6186	Idle Gear	RD 6377	Main Shaft Spacer	RD 6406	Body
RD 6188	Worm Shaft Ring	RD 6378	Main Shaft	RD 6407	Handle Screw Cap (B)
RD 6190	Ball Bearing	RD 6379	Bail Arm Screw	RD 6408	Spool Assembly