


SAHARA™ 1000FA DC

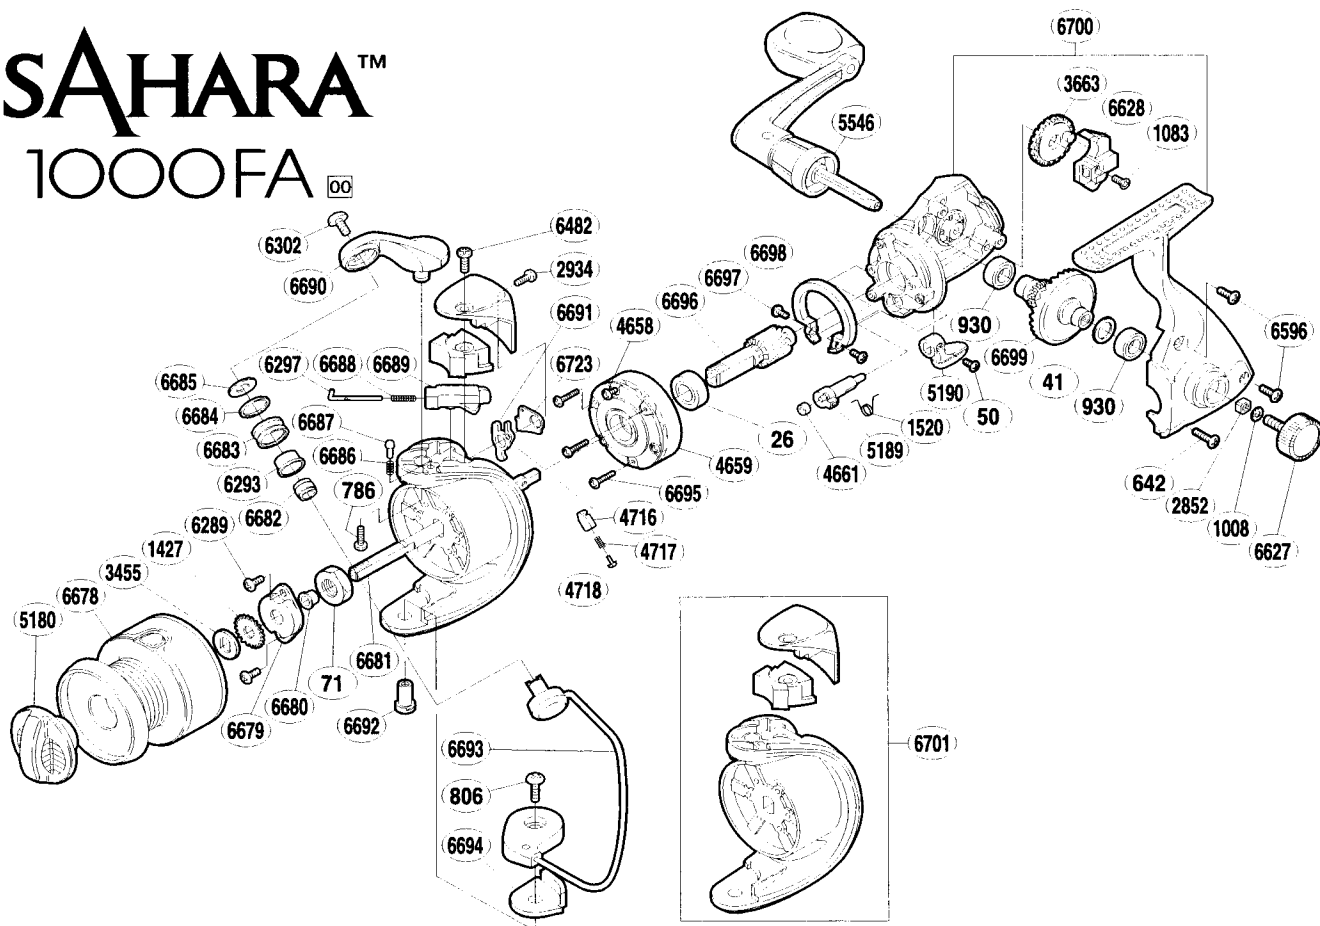

Part No. Description

RD 0026	Ball Bearing
RD 0041	Drive Gear Washer
RD 0050	Anti-Reverse Lever Screw
RD 0071	Rotor Nut
RD 0642	Side Cover Screw (long)
RD 0786	Bail Arm Screw
RD 0806	Bail Hold Support Screw
RD 0930	Ball Bearing
RD 1008	Handle Lock Washer
RD 1083	Slider Retainer Screw
RD 1427	Spool Support
RD 1520	Anti-Reverse Cam Spring
RD 2852	Handle Screw Lock
RD 2934	Rotor Protector Screw (small)
RD 3455	Spool Washer
RD 3663	Oscillating Gear
RD 4658	Clutch Cover Screw
RD 4659	Roller Clutch Assembly
RD 4661	Anti-Reverse Cam Ring
RD 4716	Lever Spring Guide (B)

Part No. Description

RD 4717	Lever Spring
RD 4718	Lever Spring Guide (A)
RD 5180	Drag Knob
RD 5189	Anti-Reverse Cam
RD 5190	Anti-Reverse Lever
RD 5546	Handle Assembly
RD 6289	Nut Retainer Screw
RD 6293	Line Roller Bushing
RD 6297	Bail Spring Guide (A)
RD 6302	Line Roller Screw
RD 6482	Rotor Protector Screw (large)
RD 6596	Side Cover Screw (short)
RD 6627	Handle Screw Cap
RD 6628	Oscillating Slider
RD 6678	Spool Assembly
RD 6679	Nut Retainer
RD 6680	Rotor Support Bushing
RD 6681	Main Shaft
RD 6682	Line Roller Collar
RD 6683	Line Roller

Part No. Description

RD 6684	Line Roller Spacer
RD 6685	Line Roller Washer
RD 6686	Click Spring
RD 6687	Bail Arm Click
RD 6688	Bail Spring
RD 6689	Bail Spring Guide (B)
RD 6690	Bail Arm
RD 6691	Bail Trip Lever
RD 6692	Bail Hold Support Shaft
RD 6693	Bail Assembly
RD 6694	Bail Hold Support Spacer
RD 6695	Roller Clutch Screw
RD 6696	Pinion Gear
RD 6697	Friction Ring Screw
RD 6698	Friction Ring
RD 6699	Drive Gear
RD 6700	Body Assembly
RD 6701	Rotor Assembly
RD 6723	Bail Trip Lever Washer