


SOLSTACE® 4000FE 00

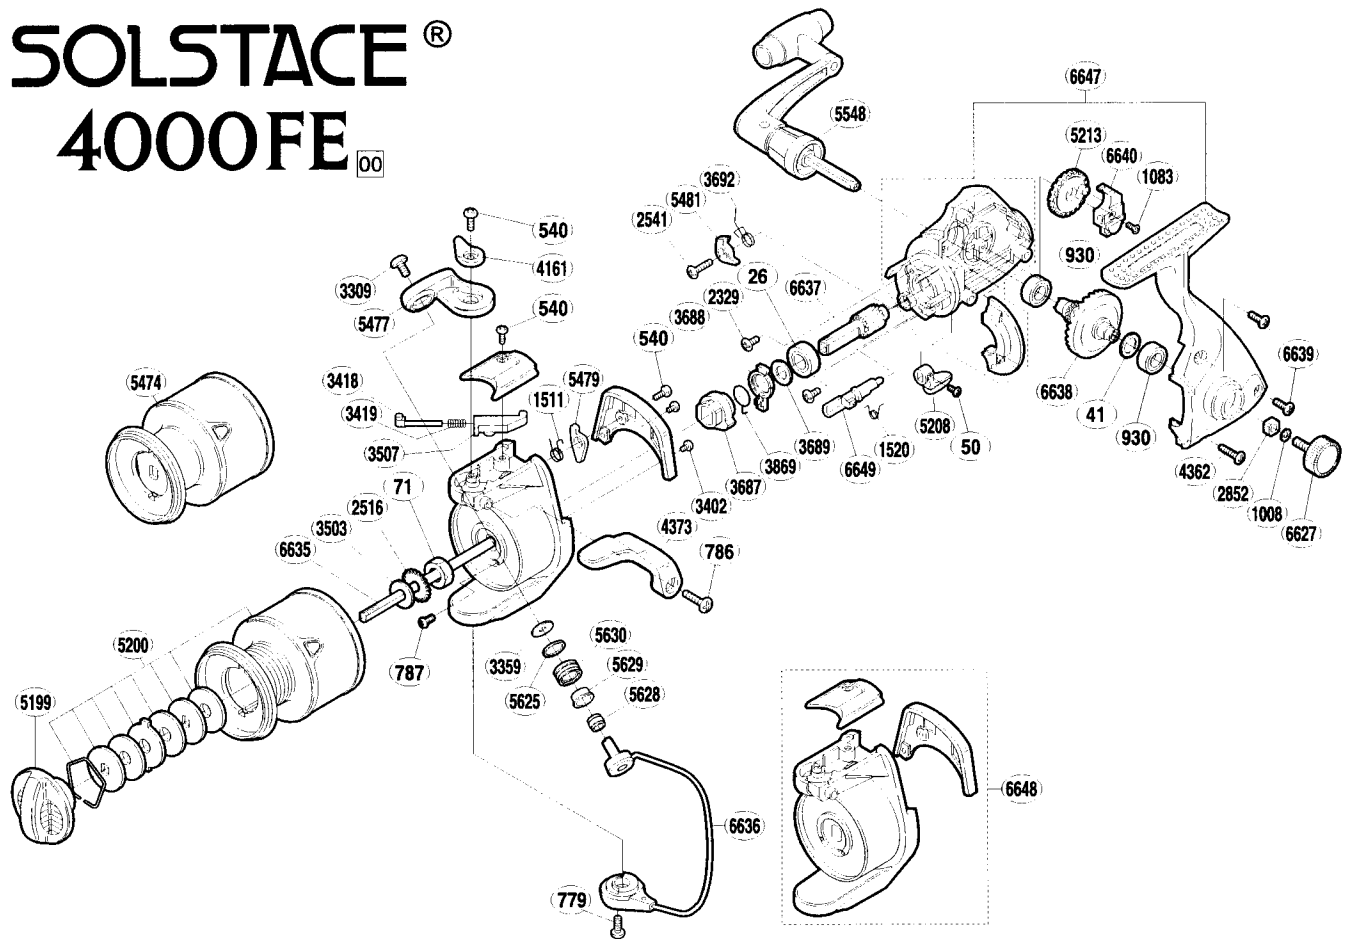

Part No.	Description	Part No.	Description	Part No.	Description
RD 0026	Ball Bearing	RD 3402	Cover Screw	RD 5479	Bail Trip Lever
RD 0041	Drive Gear Washer	RD 3418	Bail Spring Guide (A)	RD 5481	Anti-Reverse Pawl
RD 0050	Anti-Reverse Lever Screw	RD 3419	Bail Spring	RD 5548	Handle Assembly
RD 0071	Rotor Nut	RD 3503	Spool Washer	RD 5625	Line Roller Spacer
RD 0540	Multi-Purpose Screw	RD 3507	Bail Spring Guide (B)	RD 5628	Line Roller Collar
RD 0779	Bail Hold Support Screw	RD 3687	Anti-Reverse Ratchet	RD 5629	Line Roller Bushing
RD 0786	Trigger Screw	RD 3688	Anti-Reverse Lock Out	RD 5630	Line Roller
RD 0787	Nut Lock Screw	RD 3689	Bushing Washer	RD 6627	Handle Screw Cap
RD 0930	Ball Bearing	RD 3692	Anti-Reverse Pawl Spring	RD 6635	Main Shaft
RD 1008	Handle Lock Washer	RD 3869	Anti-Reverse Lock Out Spring	RD 6636	Bail Assembly
RD 1083	Slider Retainer Screw	RD 4161	Trigger Cam	RD 6637	Pinion Gear
RD 1511	Lever Spring	RD 4362	Side Cover Screw (long)	RD 6638	Drive Gear
RD 1520	Anti-Reverse Cam Spring	RD 4373	Quick-Fire II Trigger	RD 6639	Side Cover Screw (short)
RD 2329	Bearing Retainer Screw	RD 5199	Drag Knob	RD 6640	Oscillating Slider
RD 2516	Spool Support	RD 5200	Spool Assembly (aluminum)	RD 6647	Body Assembly
RD 2541	Anti-Reverse Pawl Screw	RD 5208	Anti-Reverse Lever	RD 6648	Rotor Assembly
RD 2852	Handle Screw Lock	RD 5213	Oscillating Gear	RD 6649	Anti-Reverse Cam
RD 3309	Line Roller Screw	RD 5474	Spool Assembly (graphite)		
RD 3359	Line Roller Washer	RD 5477	Bail Arm		