


SHIMANO®

Catala®

CTL-400

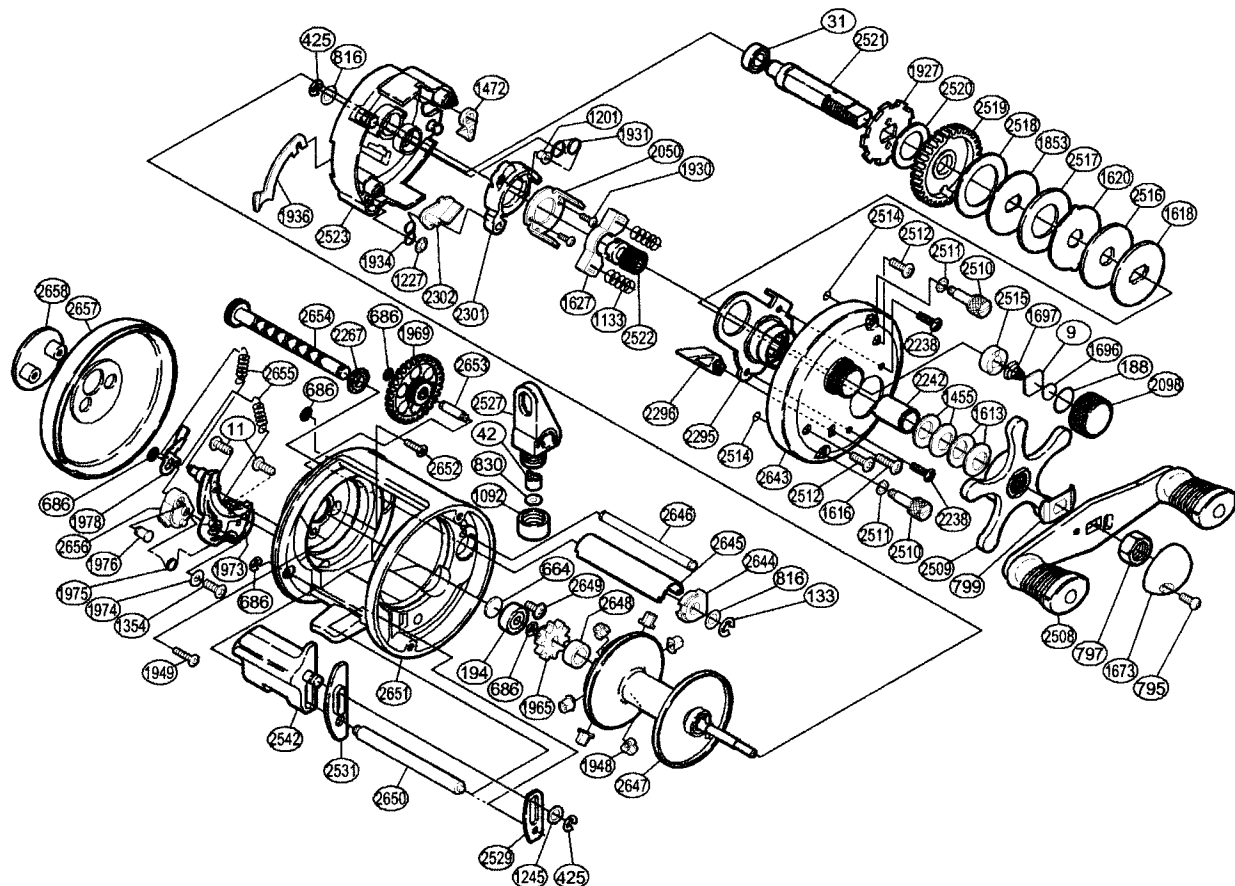

Part No.	Description	Part No.	Description	Part No.	Description
BNT0009	Spacer (A)	BNT1697	Spool Tension Spring	BNT2514	"O" Ring
BNT0011	Click Plate Screw	BNT1853	Key Washer (A)	BNT2515	Cast Control Bushing
BNT0031	Ball Bearing	BNT1927	Anti-Reverse Ratchet	BNT2516	Drag Washer (AG)
BNT0042	Line Guide Pawl	BNT1930	Clutch Cam Screw	BNT2517	Drag Washer (CG)
BNT0133	Worm Shaft Retainer	BNT1931	Retractor Spring	BNT2518	Drag Washer (BG)
BNT0188	"O" Ring	BNT1934	Clutch Pawl Spring	BNT2519	Drive Gear
BNT0194	Ball Bearing	BNT1936	Clutch Plate	BNT2520	Drive Shaft Washer (B)
BNT0425	"E" Lock	BNT1948	Brake Collar	BNT2521	Drive Shaft
BNT0664	Spacer (B)	BNT1949	I.D. Plate Screw (long)	BNT2522	Pinion Gear
BNT0686	"E" Lock	BNT1965	Idle Gear (A)	BNT2523	Set Plate
BNT0795	Handle Nut Plate Screw	BNT1969	Idle Gear (B)	BNT2527	Line Guide
BNT0797	Handle Nut	BNT1973	Click Plate	BNT2529	Clutch Button Guide (A)
BNT0799	Friction Washer	BNT1974	Click Switch Washer	BNT2531	Clutch Button Guide (B)
BNT0816	Shaft Washer	BNT1975	Click Switch Spring	BNT2542	Quick-Fire II Clutch Bar
BNT0830	Spacer (optional)	BNT1976	Click Shaft	BNT2643	Right Side Plate
BNT1092	Pawl Cap	BNT1978	Click Pawl	BNT2644	Worm Bushing (A)
BNT1133	Yoke Spring	BNT2050	Clutch Cam Retainer	BNT2645	Level Wind Guard
BNT1201	Retractor Spring Collar	BNT2098	Cast Control Cap	BNT2646	Stabilizer Bar
BNT1227	Push Nut (SPN-2)	BNT2238	Bush Plate Screw	BNT2647	Spool Assembly
BNT1245	Clutch Bar Support Spacer	BNT2242	Roller Clutch Inner Tube	BNT2648	Idle Gear (A) Bush
BNT1354	Click Switch Screw	BNT2267	Worm Bushing (B)	BNT2649	Bearing Screw
BNT1455	Drag Spring Washer (H)	BNT2295	Roller Clutch Assembly	BNT2650	Clutch Button Support Bar
BNT1472	Anti-Reverse Pawl	BNT2296	Return Pin Guide	BNT2651	One-Piece Frame
BNT1613	Drag Spring Washer (L)	BNT2301	Clutch Cam	BNT2652	I.D. Plate Screw (short)
BNT1616	Return Pin Guide Screw	BNT2302	Clutch Pawl	BNT2653	Idle Gear (B) Shaft
BNT1618	Key Washer (C)	BNT2508	Handle Assembly	BNT2654	Worm Shaft
BNT1620	Eared Washer	BNT2509	Star Drag	BNT2655	Click Spring
BNT1627	Yoke	BNT2510	Right Side Plate Nut	BNT2656	Click Switch
BNT1673	Handle Nut Plate	BNT2511	Side Plate Nut Washer	BNT2657	Left Side Plate
BNT1696	Cast Control Spacer (B)	BNT2512	Right Side Plate Screw	BNT2658	Left Side I.D. Plate

(130427)